

Wonky Monkey

User Instructions

Specifications

Model	2600mAh PowerBank
Input	DC 5V 1000mAh max via Micro-USB
Output	DC 5V 1200mAh via USB
Life time	500+ times charging/discharging
Battery	Polymer Li-ion Battery. 3.7V 2600mAh
Charge	3 hours
Size	90x30x25 mm

Features built-in high capacity battery, overcharge & over discharge protection, smart protection and high power conversion rate.



Included

1x	2600mAh PowerBank
1x	USB-Micro USB charging Cable
1x	User manual
1x	CE statement

How to charge the Wonky Monkey PowerBank?

Connect the included USB charging cable to the Micro-USB port on the Wonky Monkey PowerBank and to a USB power source, for instance on a PC, laptop or USB-AC adapter (not included).

How to charge your device?

Connect the USB charging cable to the USB port on the Wonky Monkey PowerBank and to the Micro-USB port of the device you wish to charge. For devices with a Micro-USB charging option you can use the included USB to Micro-USB cable. For devices with a different USB charging option, please use the cable included with your device.

Warnings

Do not expose the PowerBank to a heat source or hot environment.

Do not short-circuit the PowerBank.

Do not pierce, break, twist, bend, throw, hit or apply any pressure to the PowerBank.

Do not disassemble or alter the outside cover or the PowerBank.

Do not submerge or expose the PowerBank to fluids.