

Wonky Monkey



User Instructions

Specifications

Model	4400mAh PowerBank
Input	DC 5V 1000mA max via Micro-USB
Output	DC 5V 2000mA via USB
Life time	500+ times charging/discharging
Battery	Li-ion Battery. 3.7V 4400mAh
Charge	appr. 5 hours
Size	100x44x22 mm

Features built-in high capacity battery, overcharge & over discharge protection, smart protection and high power conversion rate

Included

1x	4400mAh PowerBank
1x	USB-Micro USB charging Cable
1x	User manual

How to charge the Wonky Monkey PowerBank?

Connect the included USB charging cable to the Micro-USB port on the Wonky Monkey PowerBank and to a USB power source, for instance on a PC, laptop or USB-AC adapter (not included).

How to charge your device?

Connect the USB charging cable to the USB port on the Wonky Monkey PowerBank and to the Micro-USB port of the device you wish to charge. For devices with a Micro-USB charging option you can use the included USB to Micro-USB cable. For devices with a different USB charging option, please use the cable included with your device.

Warnings

- Do not expose the PowerBank to a heat source or hot environment.
- Do not short-circuit the PowerBank.
- Do not pierce, break, twist, bend, throw, hit or apply any pressure to the PowerBank.
- Do not disassemble or alter the outside cover or the PowerBank.
- Do not submerge or expose the PowerBank to fluids.

Hereby we declare that the product is in conformity with the following European standards:
-RoHS Directive 2011/65/EU
Complete declarations of conformity can be found at: www.wonkymonkey.nl



Wonky Monkey



User Instructions

Specifications

Model	4400mAh PowerBank
Input	DC 5V 1000mA max via Micro-USB
Output	DC 5V 2000mA via USB
Life time	500+ times charging/discharging
Battery	Li-ion Battery. 3.7V 4400mAh
Charge	appr. 5 hours
Size	100x44x22 mm

Features built-in high capacity battery, overcharge & over discharge protection, smart protection and high power conversion rate

Included

1x	4400mAh PowerBank
1x	USB-Micro USB charging Cable
1x	User manual

How to charge the Wonky Monkey PowerBank?

Connect the included USB charging cable to the Micro-USB port on the Wonky Monkey PowerBank and to a USB power source, for instance on a PC, laptop or USB-AC adapter (not included).

How to charge your device?

Connect the USB charging cable to the USB port on the Wonky Monkey PowerBank and to the Micro-USB port of the device you wish to charge. For devices with a Micro-USB charging option you can use the included USB to Micro-USB cable. For devices with a different USB charging option, please use the cable included with your device.

Warnings

- Do not expose the PowerBank to a heat source or hot environment.
- Do not short-circuit the PowerBank.
- Do not pierce, break, twist, bend, throw, hit or apply any pressure to the PowerBank.
- Do not disassemble or alter the outside cover or the PowerBank.
- Do not submerge or expose the PowerBank to fluids.

Hereby we declare that the product is in conformity with the following European standards:
-RoHS Directive 2011/65/EU
Complete declarations of conformity can be found at: www.wonkymonkey.nl



Wonky Monkey



User Instructions

Specifications

Model	4400mAh PowerBank
Input	DC 5V 1000mA max via Micro-USB
Output	DC 5V 2000mA via USB
Life time	500+ times charging/discharging
Battery	Li-ion Battery. 3.7V 4400mAh
Charge	appr. 5 hours
Size	100x44x22 mm

Features built-in high capacity battery, overcharge & over discharge protection, smart protection and high power conversion rate

Included

1x	4400mAh PowerBank
1x	USB-Micro USB charging Cable
1x	User manual

How to charge the Wonky Monkey PowerBank?

Connect the included USB charging cable to the Micro-USB port on the Wonky Monkey PowerBank and to a USB power source, for instance on a PC, laptop or USB-AC adapter (not included).

How to charge your device?

Connect the USB charging cable to the USB port on the Wonky Monkey PowerBank and to the Micro-USB port of the device you wish to charge. For devices with a Micro-USB charging option you can use the included USB to Micro-USB cable. For devices with a different USB charging option, please use the cable included with your device.

Warnings

- Do not expose the PowerBank to a heat source or hot environment.
- Do not short-circuit the PowerBank.
- Do not pierce, break, twist, bend, throw, hit or apply any pressure to the PowerBank.
- Do not disassemble or alter the outside cover or the PowerBank.
- Do not submerge or expose the PowerBank to fluids.

Hereby we declare that the product is in conformity with the following European standards:
-RoHS Directive 2011/65/EU
Complete declarations of conformity can be found at: www.wonkymonkey.nl



Wonky Monkey



User Instructions

Specifications

Model	4400mAh PowerBank
Input	DC 5V 1000mA max via Micro-USB
Output	DC 5V 2000mA via USB
Life time	500+ times charging/discharging
Battery	Li-ion Battery. 3.7V 4400mAh
Charge	appr. 5 hours
Size	100x44x22 mm

Features built-in high capacity battery, overcharge & over discharge protection, smart protection and high power conversion rate

Included

1x	4400mAh PowerBank
1x	USB-Micro USB charging Cable
1x	User manual

How to charge the Wonky Monkey PowerBank?

Connect the included USB charging cable to the Micro-USB port on the Wonky Monkey PowerBank and to a USB power source, for instance on a PC, laptop or USB-AC adapter (not included).

How to charge your device?

Connect the USB charging cable to the USB port on the Wonky Monkey PowerBank and to the Micro-USB port of the device you wish to charge. For devices with a Micro-USB charging option you can use the included USB to Micro-USB cable. For devices with a different USB charging option, please use the cable included with your device.

Warnings

- Do not expose the PowerBank to a heat source or hot environment.
- Do not short-circuit the PowerBank.
- Do not pierce, break, twist, bend, throw, hit or apply any pressure to the PowerBank.
- Do not disassemble or alter the outside cover or the PowerBank.
- Do not submerge or expose the PowerBank to fluids.

Hereby we declare that the product is in conformity with the following European standards:

-RoHS Directive 2011/65/EU

Complete declarations of conformity can be found at: www.wonkymonkey.nl



Wonky Monkey



Instructions d'utilisation

Spécifications

Modèle	4400mAh PowerBank
Entrée	DC 5V 1 000 mA max via Micro-USB
Sortie	DC 5V 2 000mA via USB
Durée de vie	500+ heures de charge / décharge
Batterie	Batterie ion de Li. 3.7 V 4400 mAh
Charge	env. 5 heures
Taille	100x44x22 mm
Caractéristiques	batterie intégrée haute capacité, protection contre la surcharge et la décharge, protection intelligente et taux de conversion de puissance élevé

Inclus

1x	4400mAh PowerBank
1x	Câble de chargement USB-Micro USB
1x	Mode d'emploi

Comment recharger le PowerBank Wonky Monkey ?

Brancher le câble de chargement USB fourni au port Micro-USB du PowerBank Wonky Monkey et à une source d'alimentation USB, par exemple un PC, un ordinateur portable ou un adaptateur USB-AC (non inclus).

Comment recharger votre appareil ?

Brancher le câble de recharge USB sur le port USB du Wonky Monkey PowerBank et sur le port Micro-USB de l'appareil que l'on souhaite charger. Pour les appareils avec une option de charge Micro-USB, on peut utiliser le câble USB pour Micro-USB fourni. Pour les appareils avec une option différente de recharge USB, veuillez utiliser le câble fourni avec votre appareil.

Avertissements

- Ne pas exposer le PowerBank à une source de chaleur ou dans un environnement chaud.
- Ne pas court-circuiter le PowerBank.
- Ne pas percer, casser, tordre, plier, jeter, frapper ou exercer de pression sur le PowerBank.
- Ne pas démonter ou modifier la couverture extérieure ou le PowerBank.
- Ne pas immerger ou exposer aux fluides le PowerBank.

Par la présente, nous déclarons que le produit est en

conformité avec les normes européennes suivantes :

- Directive RoHS 2011/65/UE

Les déclarations de conformité peuvent être trouvés à l'adresse : www.wonkymonkey.nl

